

# Home Center 2

FIBARO SYSTEM 2



*Thank You for purchasing Home Center 2*

To start using Fibaro System Home Center 2, please connect the device to power and LAN sockets, as shown below.

## 1. Unscrew left side panel



## 2. Take side panel off



## 3. Connect wires as shown on figure below




**WARNING!** Do not turn Home Center 2 on without RECOVERY pendrive.

## 4. Connect HC2

Connect power cable to the mains, and network cable to LAN socket in your router (Home Center 2 requires an outside router).

## 5. Start Home Center 2

Start HC2 with a POWER button and wait approx. 2 minutes for the device to start. Correct connection will be signalled by diodes 1, 2, 3 (see the glossary below).

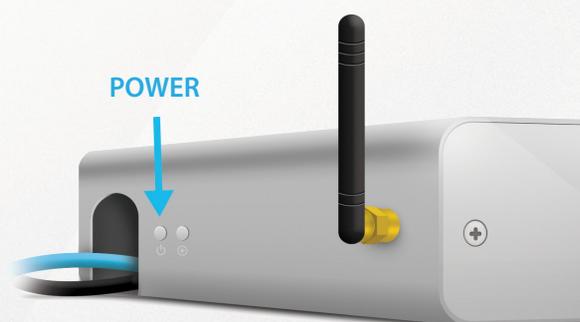

## LED Indicators

-  POWER - power ON
-  LAN - HC2 connected to Ethernet
-  INTERNET - HC2 connected to Internet
-  Z-WAVE - communication within Z-Wave network
-  LEARN MODE [blinking slowly] - new device being added to the Z-Wave network  
LEARN MODE [blinking] - device being deleted from the Z-Wave network  
LEARN MODE [blinking quickly] - device has been added/removed.
-  RECOVERY - Recovery Mode active
-  UPDATE - New software version available for download
-  SERVICE - Software update in progress.

## 6. Login to Home Center 2



Go to [www.fibaro.com](http://www.fibaro.com), find Support section, download and install HC2 Finder designated for your operating system.

Start the HC2 Finder and click "Refresh". After the list of Home Center 2, available within your local network appears, choose the one you wish to connect and click "connect".

After successful connection you will access HC2 control panel. Choose your language version, enter user name and password. Defaults are: admin / admin.

## Back panel buttons

-  **POWER**
  - click to turn HC2 ON
  - click (when HC2 ON) to reset the device
  - press and hold for approx 10 seconds to turn HC2 OFF
-  **LEARN MODE**
  - click once - entering Learn Mode (add new Z-Wave device),
  - click twice - entering Learn Mode (delete Z-Wave device),
  - press and hold to set static IP: 192.168.81.1\*
-  **RECOVERY**

Disconnect the power supply. Press and hold Learn Mode button when reconnecting the power supply (release the button after entering Recovery Mode)\*.

\*NOTE: after setting static IP Home Center 2 will lose the router connection.